

GPCarry

About the GP Carry

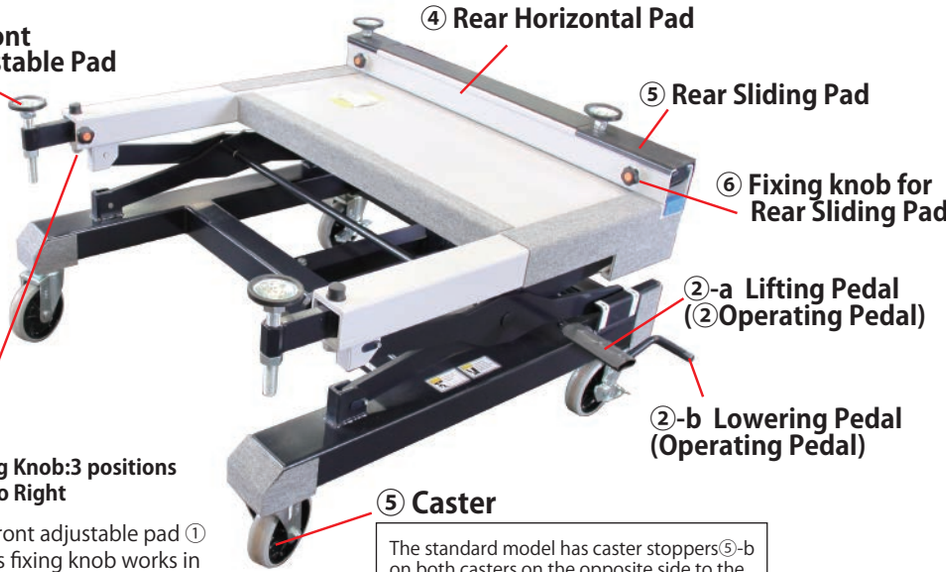

※The front adjustable pad ① and it' s fixing knob works in 3 positions - left to right⑧. It is installed only in the full concert model.

The standard model has caster stoppers⑤-b on both casters on the opposite side to the Lifting and Operating Pedal②.
The full concert model has stoppers on the 2 casters left and right of the Rear Sliding Pad④.

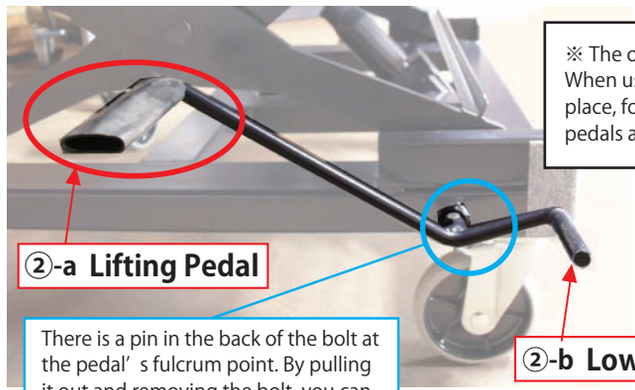

※ The operation pedals can be removed. When using the GP Carry in a public place, for safety remove the operation pedals and keep them in a safe place.


There is a pin in the back of the bolt at the pedal' s fulcrum point. By pulling it out and removing the bolt, you can remove the handle.

Instructions for use

Trial Operation Method

【 I 】 Step on the GP Carry' s lowering pedal ②-b to lower the GP Carry to it' s lowest position.

【 II 】 Maneuver the GP Carry as shown in Fig. 1. Please be careful not to damage the lower parts of the piano. Align the GP Carry's front adjustable pad ①, so that it touches the keybed behind the bottom beam as shown in Figure 2.
In the case of a full-concert piano, place the front adjustable pad near the back beam behind the piano's keybed.

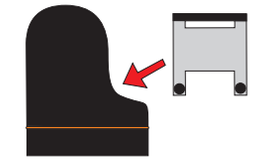

【 III 】 Step on the lifting pedal ②-a and lift the rear horizontal pad ④until it touches the Bottom of the piano.
Then turn the front adjustable pad ① until it touches the Keybed.
Next, tighten the nut on the back of the front adjustable pad ① to secure it.

【 IV 】 Raise the piano until it' s legs are 10 - 15 cm above the floor. When raising it, pay attention to the balance of the entire piano.
(If the piano is tilted in any way, lower the piano once and adjust the GP Carry' s position again.)
If there is no particular problem in raising or lowering the piano, lower the piano once and get the ○ and □ positioning stickers ready.
Remove the double-sided tape from the two ○ positioning stickers, and place the stickers, glue side up, on top of the front adjustable pad ① in order to attach them to the bottom of the piano. In the same way, first place the □positioning stickers in line with the rear horizontal pad where the wood frames touch. When the carry is raised, the □positioning stickers should be stuck to the bottom of the piano. When next using the GP Carry, use the positioning stickers as a guide to set the GP Carry ready for transporting the piano.

Moving Method.

【 I 】 Always use two people to move the piano. Place your hands on the body of the piano for support and carry it slowly. After moving the piano to the desired position, step on the lowering pedal ②-b to lower the piano.

※ Note : When lowering the piano, be sure to press the lowering pedal all the way down. When making fine adjustments with the pedal, the piano may move up and down.

【 II 】 Finally, lower the GP Carry and carefully remove it so that it does not damage the piano.
This procedure is also explained in our website.